Ross Video Limited

DFR-8110A(-C)

Digital Products Frame & Power Supply (PS-8102)

User Manual

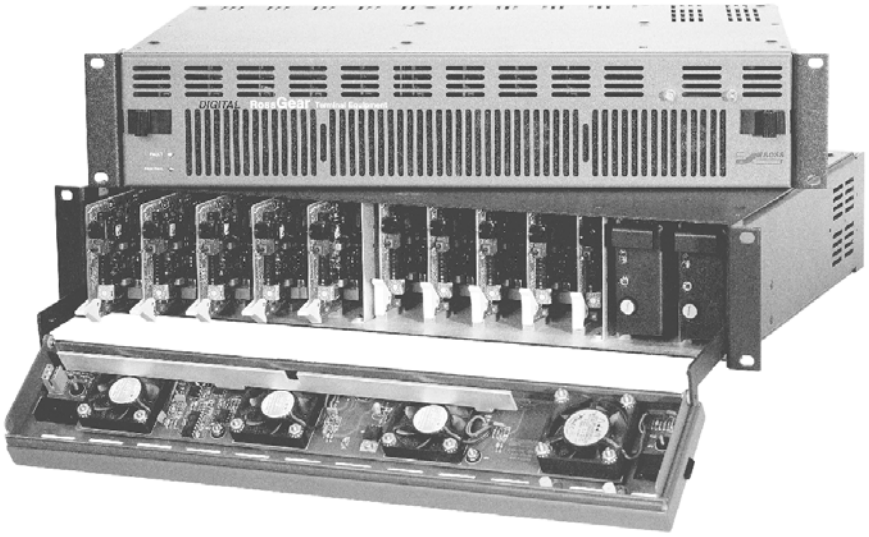

Ross Part Number: 8110ADR-004
Issue: 01A

Cool Practical Technology™

DFR-8110A • Digital Products Frame & Power Supply (PS-8102) User Manual

- Ross Part Number: **8110ADR-004**
- Document Issue: **01A**
- Release Date: November 30, 2005. Printed in Canada.

The information contained in this User Manual is subject to change without notice or obligation.

Copyright

© 2005 Ross Video Limited. All rights reserved.

Contents of this publication may not be reproduced in any form without the written permission of Ross Video Limited. Reproduction or reverse engineering of copyrighted software is prohibited.

Notice

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as a commitment by Ross Video Limited. Ross Video Limited assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

Trademarks

-

is a registered trademark of Ross Video Limited.
- Ross, ROSS, ROSS®, and MLE are registered trademarks of Ross Video Limited.
- All other product names and any registered and unregistered trademarks mentioned in this manual are used for identification purposes only and remain the exclusive property of their respective owners.

Important Regulatory and Safety Notices

Before using this product and any associated equipment, refer to the “Important Safety Instructions” listed below so as to avoid personnel injury and to prevent product damage.

Products may require specific equipment, and /or installation procedures be carried out to satisfy certain regulatory compliance requirements. Notices have been included in this publication to call attention to these Specific requirements.

Symbol Meanings

This symbol on the equipment refers you to important operating and maintenance (servicing) instructions within the Product Manual Documentation. Failure to heed this information may present a major risk of damage or injury to persons or equipment.

Warning

The symbol with the word **“Warning”** within the equipment manual indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury.

Caution

The symbol with the word “**Caution**” within the equipment manual indicates a potentially hazardous situation, which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

Notice

The symbol with the word “**Notice**” within the equipment manual indicates a situation, which if not avoided, may result in major or minor equipment damage or a situation which could place the equipment in a non-compliant operating state.

Warning Hazardous Voltages

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of shock to persons.

ESD Susceptibility

This symbol is used to alert the user that an electrical or electronic device or assembly is susceptible to damage from an ESD event.

Important Safety Instructions

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Warning

The safe operation of this product requires that a protective earth connection be provided. A grounding conductor in the equipment's supply cord provides this protective earth. To reduce the risk of electrical shock to the operator and service personnel, this ground conductor must be connected to an earthed ground.

Use only power cords specified for this product and certified for the country of use. Refer to the Product Power Cord Requirement Section that follows.

Do not defeat the safety purpose of the grounding-type plug. A grounding type plug has two blades and a third grounding prong. The third prong is provided for your safety. If the provided plug does not fit in to your outlet, consult an electrician for replacement of the obsolete outlet.

Protect the power cord from being walked on or pinching particularly at plugs, convenience receptacles, and point where they exit from the apparatus.

Warning

Indoor Use: “WARNING – TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPERATUS TO RAIN OR MOISTURE”

Do not use this apparatus near water.

Do not block any ventilation openings. Install in accordance with manufacturer’s instructions.

Do not install near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Only use attachments/accessories specified by the manufacturer.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Clean only with a dry cloth.

Warning

Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug damage, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Warning

Certain parts of this equipment still present a safety hazard, with the power switch in the OFF position. To avoid electrical shock, disconnect all A/C power cords from the chassis' rear appliance connectors before servicing.

Caution

To reduce the risk of fire, replacement fuses must be the same type and rating.

Caution

Service barriers within this product are intended to protect the operator and service personnel from hazardous voltages. For continued safety, replace all barriers after servicing.

Warning

This product contains safety critical parts, which if incorrectly replaced may present a risk of fire or electrical shock. Components contained within the product’s power supplies and power supply area, are not intended to be customer serviced and should be returned to the factory for repair.

Product Power Cord Requirements

Warning

North American Line Voltages 100 - 120 Volts

This product is supplied with certified 10A/125V SVT type supply cords.

Conductors are color coded white (neutral), black (line) and green or green/yellow (ground).

Operation of this equipment at line voltages exceeding 130V requires that alternative supply cords with appropriate voltage and current ratings be used

Warning

International Line Voltages 200 - 240 Volts

This product has been designed for use with certified IEC 320- C13 10A/250V - **H03 VV-F3G 1.00mm^2** type line cord.

International product orders are supplied with a certified 10A/250V line cords, utilizing a molded 3-pin IEC 320-C13 type connector at one end and stripped conductors on the other. One line cord is provided. Conductors are CEE color coded; blue (neutral), brown (line), and green/yellow (ground).

Installation by a qualified Electrician, of an appropriately approved A/C wall plug certified for the country of use, is required.

Alternatively, other IEC 320 C-13 type power cords may be used, provided that they meet the necessary safety certification requirements for the country in which they are to be used. Refer to the correctly specified line cord above.

EMC Notices

US FCC Part 15

This equipment has been tested and found to comply with the limits for a class A Digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case users will be required to correct the interference at their own expense.

Notice

Changes or modifications to this equipment not expressly approved by Ross Video Ltd. could void the user's authority to operate this equipment.

CANADA

This Class "A" digital apparatus complies with Canadian ICES-003.

Cet appareil numerique de classe "A" est conforme à la norme NMB-003 du Canada.

EUROPE

This equipment is in compliance with the essential requirements and other relevant provisions of **CE Directive 93/68/EEC**.

INTERNATIONAL

This equipment has been tested to **CISPR 22:1997** along with amendments **A1:2000** and **A2:2002** and found to comply with the limits for a Class A Digital device.

Notice

This is a Class A product. In domestic environments this product may cause radio interference in which case the user may have to take adequate measures.

Maintenance/User Serviceable Parts

Routine maintenance to this RossGear product is not required. This product contains no user serviceable parts. If the module does not appear to be working properly, please contact Technical Support using the numbers listed under the "Contact Us" section on the last page of this manual. All RossGear products are covered by a generous 5-year warranty and will be repaired without charge for materials or labor within this period. See the "Warranty and Repair Policy" section in this manual for details.

Environmental Information

The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.

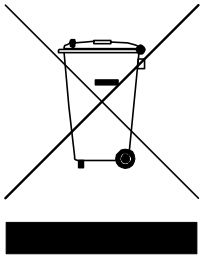

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You can also contact Ross Video for more information on the environmental performances of our products.

Contents

Introduction 1-1

In This Chapter 1-1
- A Word of Thanks 1-1
- Overview 1-2
- Features 1-3
- Documentation Terms 1-4

Installation and Setup 2-1

In This Chapter 2-1
- Static Discharge 2-1
- Unpacking 2-1
- Mechanical 2-2
- Power Supply PS-8102 and Power Cable 2-2
- Fault Reporting 2-3
- Improving Performance 2-3
- Ventilation and Cooling 2-3
- Cable Connections 2-4

Specifications 3-1

In This Chapter 3-1
- Technical Specifications 3-2

Optional Field Upgrade Kits 4-1

In this Chapter 4-1
- CFM-8110A Cooling Fan Module 4-1
- CRB-8110A Card Retaining Bracket 4-2
- FSB-7110 Rear Support Bars and Brackets 4-3
- BPM-8110A Cable Support Bracket 4-3

Service Information 5-1

In This Chapter 5-1
- Troubleshooting Checklist 5-1
- Warranty and Repair Policy 5-2

Ordering Information 6-1

In This Chapter 6-1
- DFR-8110A and Related Products 6-1

Introduction

In This Chapter

This chapter contains the following information sections:

- A Word of Thanks
- Overview
- Features
- Documentation Terms

A Word of Thanks

Congratulations on choosing the Ross Video **DFR-8110A Digital Products Frame & Power Supply (PS-8102)**. The DFR-8110A is part of a full line of Digital Products within the RossGear Terminal Equipment family of products, backed by Ross Video's experience in engineering and design expertise since 1974.

You will be pleased at how easily your new DFR-8110A fits into your overall working environment. Equally pleasing is the product quality, reliability and functionality. Thank you for joining the group of worldwide satisfied Ross Video customers!

Should you have a question pertaining to the installation or operation of your DFR-8110A, please contact us at the numbers listed on the back cover of this manual. Our technical support staff is always available for consultation, training, or service.

Overview

The DFR-8110A Digital Products Frame accommodates up to ten Ross 8000 series Distribution Products or ten Leitch* 6800 series video products. For high power consumption requirements, the DFR-8110A can be field upgraded with the CFM-8110A Cooling Fan Module, which is mounted on the inside of the door. Alternatively, the DFR-8110A-C version comes direct from the factory with the cooling fan option already installed. The DFR-8110A design offers several key features such as; heavy-duty door hinges, durable powder-coat paint finish, and a specially designed top cover to enable frame stacking in high density environments.

The DFR-8110A carries forward the heritage of our past digital frames by featuring our unique Master Reference Input, which accepts one external analog color black signal that is distributed to all modules. The frame also employs rugged aluminum construction, which provides superb heat dissipation, as well as the use of the highest quality connectors throughout the product.

The new universal power supply, PS-8102, is a power factor corrected supply that will accommodate all world standards (85 - 264 volts) with up to 80 Watts of module power. Of special note is that the PS-8102 has the ability to sustain a 100ms input voltage loss, or glitch, while maintaining a full power output. This is of great importance in areas where incoming power may not be clean.

Note

It is recommended, for long-term reliability and increased product lifespan, that total dissipation of all modules installed in a 2RU frame should not exceed 40 Watts total without the use of the Cooling Fan Module. Please see the Ventilation and Cooling section for details.

* Leitch is a trademark of Leitch Technology Corporation

Features

The following features make the DFR-8110A(-C) one of the finest digital products frames on the market today:

- DFR-8110A(-C) accommodates 10 modules in 2 rack units
- Heavy duty door hinges
- Durable powder-coat paint finish
- Aluminum construction for increased heat dissipation and weight reduction
- Master Reference Input feeds all module slots
- Power Switch is accessible from front of the rack frame
- Universal Power Supply (PS-8102) for all world standards (85 - 264 volts)
- PS-8102 sustains a 100ms incoming power glitch while maintaining full output power
- Power factor corrected supply with power fail detection circuit
- Optional redundant power supply (PS-8102)
- Separate power cords for each supply for power redundancy
- *PowerLock* cord retainer mechanism guards against accidental power loss
- Optional Cooling Fan Module for increased ventilation
- Fan Fail and Error Indicator LEDs on front of the frame (available with optional Cooling Fan Module)
- Optional Extender Board Module for servicing
- Optional Cable Support Bracket
- Optional Frame Support Brackets
- 5-year transferable warranty
- Also accepts Leitch 6800 series video products

Documentation Terms

The following terms are used throughout this guide:

- "**Frame**" refers to the **DFR-8110A** frames that house the cards.
- All references to the **DFR-8110A** also include the **DFR-8110A-C** versions with the cooling fan option. See the appropriate section in this User Manual for details.
- "**Operator**" and "**User**" both refer to the person who uses the **DFR-8110A**.
- "**Board**", "**Card**", and "**Module**" all refer to the RossGear card(s) installed in the frame, including all components and switches.
- "**System**" and "**Video system**" refers to the mix of interconnected digital and analog production and terminal equipment in which the **DFR-8110A** operates.

Installation and Setup

In This Chapter

This chapter contains the following information sections:

- Static Discharge
- Unpacking
- Mechanical
- Power Supply PS-8102 and Power Cable
- Fault Reporting
- Improving Performance
- Ventilation and Cooling
- Cable Connections
- PCB Designation Labels

Static Discharge

Whenever handling the DFR-8110A and other related equipment, please observe all static discharge precautions as described in the following note:

ESD Susceptibility

Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas, and when wearing synthetic fiber clothing. Always exercise proper grounding precautions when working on circuit boards and related equipment.

Unpacking

Unpack each DFR-8110A you received from the shipping container, and check the contents against the packing list to ensure that all items are included. If any items are missing or damaged, contact your sales representative or Ross Video directly.

Mechanical

The frame mounts in the rack cabinet by means of four rack screws fastened through the front mounting flanges. This should normally be sufficient to carry the load, including the weight of accompanying cables. However, in certain applications such as mobile truck installations, it may be desirable to also support the rear of the frame. Ross Video has specifically engineered the optional FSB-7110 Rear Support Bars and Brackets to compensate for extra load stress. Please see the Optional Field Upgrades section of this manual for detailed installation instructions. The Ordering Information section at the end of this manual provides contact information for acquiring this innovative equipment at a nominal cost.

Power Supply PS-8102 and Power Cable

The DFR-8110A(-C) comes standard with one PS-8102 power supply, with a second optional supply available for redundancy. For redundancy, and in applications where the equipment is used in a critical signal path, we recommend that two power supplies be used in the DFR-8110A (& DFR-8110A-C) frame. One power cable has been provided with each power supply ordered.

For further redundancy, each power cord should be connected to a separate power source for protection against failure of the supply or power. Reliability will also be improved when using redundant supplies as each supply shares the load. In the event of one power supply failure, module power is seamlessly transferred to the other, redundant supply. Although the power supply is "hot-swappable," turning the power supply off, before inserting or removing it from the frame, will increase the lifespan of connectors.

Of great importance to the user who may have unstable or unpredictable facility power, is the ability of the PS-8102 to withstand input power glitches of up to 100ms in length, while still providing uninterrupted power to the modules in the frame. This is an essential feature for applications such as program feeds, live event feeds, or wherever a robust signal system is required. The ability of the PS-8102 to withstand input power glitches is increased with the use of redundant supplies.

Installing the Frame Power Supply

The power supply tray plugs *vertically* into the right-hand section of the chassis. The supply is universal, and no power adjustments are required. The secondary (redundant) supply, if ordered, is already installed in the tray.

Use the following steps to install the power supply:

1. Carefully unpack the power supply from its box, and retain all packing material for future use, if required.
2. Align the guide rails on the top and bottom of the tray with the slots in the chassis.
3. Push the power supply in firmly to ensure a tight connection at the rear of the frame.

Note

In case of a power supply failure, contact your dealer or Ross Video.

The PS-8102 is a power factor corrected supply, capable of working with all world standards (85-264V). The supply has an error detection circuit that will indicate the following conditions:

Table 1. PS-8102 Error Detection Circuit Conditions

Condition	Indication
Light load (< 2 Watts)	Red LED flashing
Blown O/P fuse	Red LED lit
Short circuit (internal)*	Red LED flashes
Short circuit (external)	Red LED lit Fuse blows on O/P of supply
Normal conditions load: 2 Watts to 40 Watts (Recommended load > 2 Watts)	Green LED lit

* If power is turned on with a "short" condition in the frame or one of the modules, the power supply will go into a startup and shutdown sequence until the "short" is removed. The Red LED flashes under this condition.

Fault Reporting

The error conditions listed in Table 1 will trigger the SMPTE 269M fault reporting circuit, and the signal will be sent to Aux A on the back of the frame. (See the section on Aux A Connector for a full explanation.)

Improving Performance

To improve performance and reliability, the PS-8102 has an on-board fan. For even better reliability, and high load conditions (>40 Watts), we recommend the use of the CFM-8110A Cooling Fan Module.

Ventilation and Cooling

This frame has been specially engineered to minimize internal heat buildup and thus improve module reliability. However, for long-term reliability and increased product life of the DFR-8110A frame (without the Cooling Fan Module installed), it is recommended that the total power dissipation of all modules installed should not exceed 40 Watts, and to leave an empty 1RU panel space above and below the frame for improved heat dissipation. For information on the power requirements of RossGear modules, please refer to the Ross Video Product Catalog or visit our website.

It is also recommended for applications using less than 40 Watts in a non-ventilated frame, but where the individual module power consumption is greater than 8 Watts, that the cards be evenly distributed in the frame. This measure will prevent the creation of concentrated heat, or unbalanced heat-rise areas, in the frame.

For applications that require greater heat dissipation, or where the module power consumption is greater than 40 Watts, we recommend the use of the DFR-8110A-C frame (with Cooling Fan Module installed), or installation of the CFM-8110A Cooling Fan Module, field upgrade option. When the Cooling Fan Module is installed, the frame and PS-8102 can supply up to 80 Watts of module power. Under these ventilated conditions, there is **no requirement for extra spacing** between the frames. The DFR-8110A-C (or DFR-8110A with CFM-8110A option) can be stacked one on top of the other, a feature that is highly desirable in densely crowded rack frame environments.

Notice

For reliable performance, it is recommended that the frame door not be opened for longer than 5 minutes when using the Cooling Fan Module option on frames loaded with more than 40 watts.

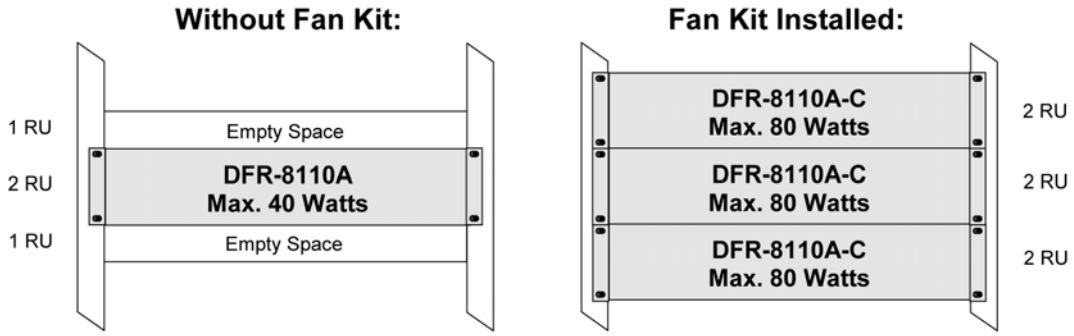

Figure 1. Cooling Fan Module Frame Stacking Options

Cable Connections

The frame BNC connectors have been marked as inputs and outputs. In some cases, the connectors will have been assigned a different function. Consult the installation section of each module, or BNC designations screened on the card, for a translation table, if required.

The inputs are internally terminated in 75 ohms.

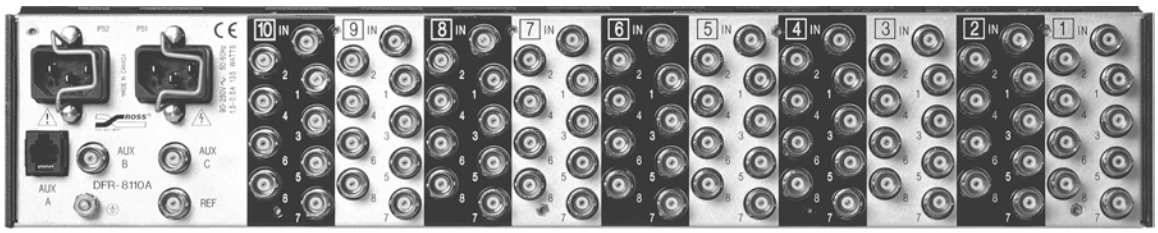

Figure 2. DFR-8110A (& DFR-8110A-C) Rear Panel View

Aux A Connector

The Aux A telco connector may be wired to an external alarm system for reporting alarms in SMPTE 269M format. For more details on this type of system, refer to the document ANSI/SMPTE 269M - 1994, available from SMPTE.

Some modules have provision for reporting signal loss and certain other fault conditions. All such cards in the frame connect to an opto-isolator circuit in the frame.

For example, in the case of the SRA-8001A Serial Auto-Reclocking Amplifier, if the input signal is lost or low, the INPUT STATUS Red LED will be lit. If the FAULT REPORT jumper is in the ENABLE position, then there will be a pulsed contact closure on the telco connector for as long as the error condition continues. The output circuit will be closed for about 1-2 milliseconds, repeated approximately every 17 milliseconds. In the absence of a fault, the output will remain open. The circuit can drive a 20mA alarm load.

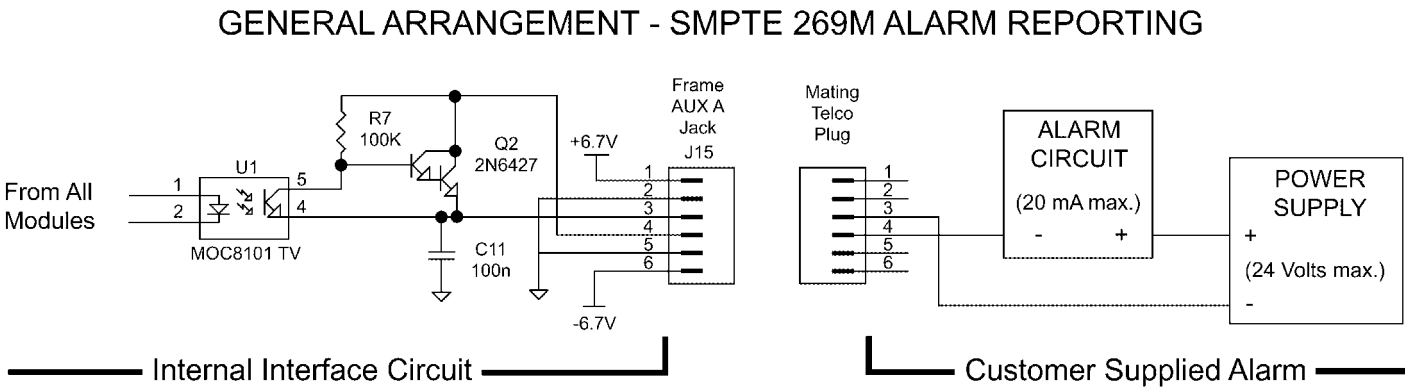

Figure 3. SMPTE 269M Alarm Reporting Internal interface and typical connections

Aux B Connector

This BNC connector is used to relay data to an external monitoring system. Serial data communication is used. Only modules having this capability will use this system.

Aux C Connector

Reserved for future use.

Reference Connector

This feature, developed and brought to market by Ross Video, uses a BNC connector to input an external master frame REF signal that is distributed across the back plane to all modules. Typically analog black video is used. Some modules, which need an external reference, can use this "master" reference signal in place of taking the signal from one of the module BNC. This provides for ease of installation and reduction in reference cabling requirements. If this signal is required, it will be mentioned in the Installation section of the particular module's User Manual.

Specifications

In This Chapter

This chapter contains the Technical Specifications table.

Technical Specifications

Table 2. DFR-8110A - Technical Specifications

Category	Parameter	Specification
Power Supply	Input Voltage	85 - 250VAC 50/60 Hz
	Input Power (1RU DFR-8104A)	130W
	Output Voltage	6.7V
	Output Current	13A max @ +6.7V 4A max @ -6.7V *Note: the sum of both outputs not to exceed 13A.*
	Line Regulation change over full input range	<250mV
	Output ripple	<60mV p-p (1.8%)
For safety reasons, Ross power supplies do not fit into rack frames of other manufacturers.		
Rack Frame Mechanical	Height	3.5" (90mm)
	Width	19" (483mm)
	Depth	13" (330mm)
	Weight, with 10 cards installed:	approx. 13lbs. (5.9kg)
Frame Card Slots	Number of Slots	10
	Max Power: +12V Rail	1.0A (12 Watts)
	Max Power: -7.5V Rail	0.2A (1.5 Watts)
	Total Frame Card Power	120 Watts, total power consumption not to exceed 12W maximum per card slot.
Environmental	Ambient temperature range	0 ºC to 40 ºC
	Humidity, non condensing	<95%
Total Module Power	2RU Frame non-ventilated (DFR-8110A)	40W
	2RU Frame ventilated (DFR-8110A-C)	40W
	Output power available	80W

Important Notes:
The power requirements of each product installed in this frame is indicated in the Specifications section of the documentation provided with each module. For long-term reliability and increased product life, it is recommended that the total dissipation of all modules installed in a DFR-8110A frame should not exceed 40 Watts total. In addition, one rack unit of empty space should be provided above and below each frame for ventilation.

Please see the Ventilation and Cooling section in this User Manual for further information and options for higher load applications requiring greater heat dissipation.

Optional Field Upgrade Kits

In this Chapter

This chapter contains the following sections:

- CFM-8110A Cooling Fan Module
- CRB-8110A Card Retaining Bracket
- FSB-7110 Rear Support Bars and Brackets
- CSB-8100 Cable Support Bracket

CFM-8110A Cooling Fan Module

The standard equipment, DFR-8110A, can be also be ordered as the DFR-8110A-C version, with the Cooling Fan Module installed as original equipment from the factory. However, for customers wishing to increase the ventilation on their standard DFR-8110A frames, the optional CFM-8110A Cooling Fan Module is available as a field upgrade kit.

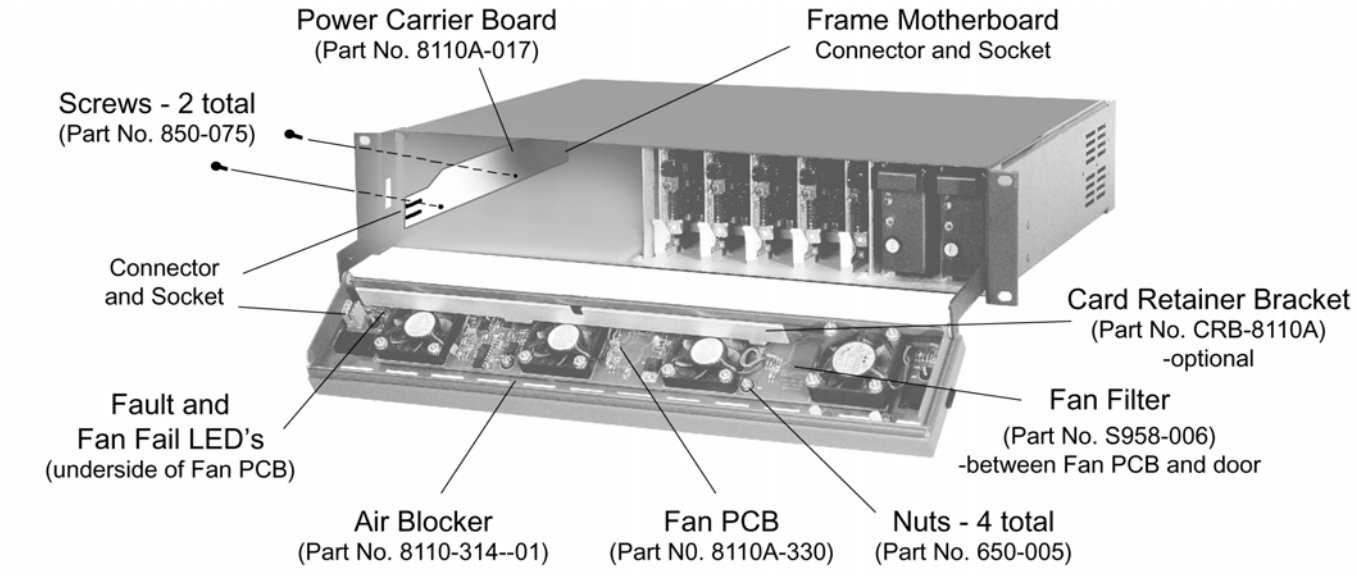

Figure 4. CFM-8110A Cooling Fan Module

CFM-8110A Installation Instructions

1. Insert the Power Carrier Board (Part No. 8110A-017) into the Frame Motherboard on the left-hand inside rear by ensuring all six pins, or three connectors, are properly aligned, and carefully fit into the sockets. It is helpful to straighten the pins if they have been bent during shipping and handling, and to remove any modules from the frame that would interfere with easy access and lines of sight.
2. Secure the Power Carrier Board to the side of the frame by inserting the two Screws (Part No. 850-075) provided, from the left side of the frame exterior. In mobile applications, secure screws with Loctite.
3. Remove the protective film from both sides of the clear plastic Air Blocker (Part No. 8110-314-01), and install it onto the door using the two Nuts (Part No. 650-005) provided.
4. Place the Fan Filter (Part No. S958-006) onto the door.
5. Install the Fan PCB (Part No. 8110A-330) on the door, ensure that alignment of the Fault and Fan Fail LED's is correct, and secure it with the four Nuts (Part No. 650-005) provided. Close the door and check the operation of the fans. If the fans do not operate, verify that the Power Carrier Board seats properly in the Frame Motherboard, and is aligned to the Fan PCB when the door is closed.

CRB-8110A Card Retaining Bracket

The CRB-8100A (Part No. 8110A-312) is useful in mobile applications to prevent frame movement from un-seating the modules. It may be installed in both the DFR-8110A and the DFR-8110A-C.

CRB-8110A Installation Instructions

Use the following instructions and Figure 5 to install the CRB-8110A.

1. Install two plastic spacers on the threaded studs near bottom of the door (see Figure 5).
2. Attach the bracket to the plastic spacers with the 850-040 screws (see Figure 5).

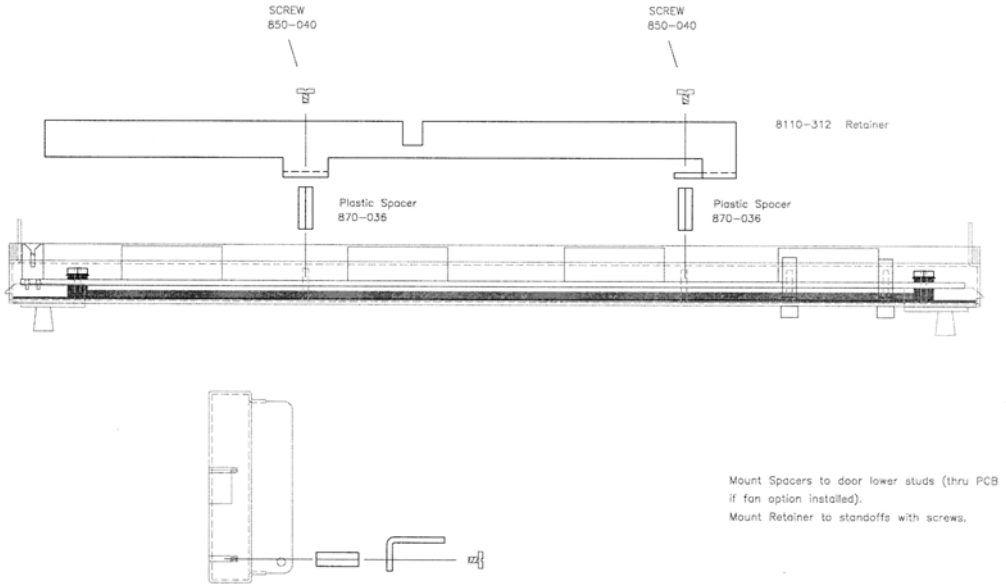

Figure 5. CRB-8110A Installation

FSB-7110 Rear Support Bars and Brackets†

Under normal conditions, mounting the frame to the front of the rack with the four rack screws provided, should be sufficient to carry the load, including the weight of accompanying cables. However, Ross Video has specifically engineered the optional FSB-7110 Rear Support Bars and Brackets to compensate for extra load stress associated with certain applications, such as mobile truck installations, to also support the rear of the frame.

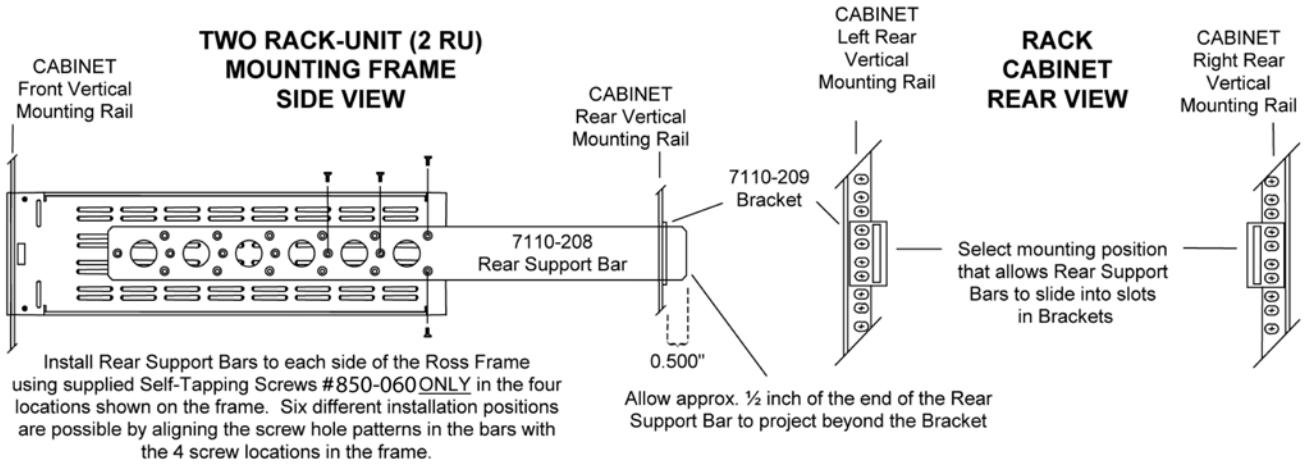

Figure 6. FSB-7110 Rear Support Bars and Brackets Diagram

FSB-7110 Installation Instructions

1. The rear support bars can be attached to the Ross frame in six possible positions; see Figure 6. Choose the position that suits the cabinet depth and will give approximately ½ inch projection beyond the rear vertical mounting rails. Using four screws per bar, as shown in Figure 6, fasten one bar to each side of the Ross frame.
2. Mount the Ross frame to the front rails of the rack cabinet using four rack screws fastened through the front mounting flanges.
3. At the rear of the cabinet, slide the bracket slots over the rear of the support bars and secure to the cabinet rear rails with two rack screws each.

CSB-8110A Cable Support Bracket‡

This bracket, which is specially designed to support the weight of cables connected to RossGEAR 8000 series digital frames, prevents strain on the BNC connectors. It attaches to the frame sides by screws, and extends beyond the frame rear where cables are tied to it.

† Please note that the FSB-7110 and CSB-8100 can not both be installed on the same frame unit.

‡ Please note that the FSB-7110 and CSB-8100 can not both be installed on the same frame unit.

Service Information

In This Chapter

This chapter contains the following sections:

- Troubleshooting Checklist
- Warranty and Repair Policy

Troubleshooting Checklist

Routine maintenance to this RossGear product is not required. In the event of problems with your DFR-8110A, the following basic troubleshooting checklist may help identify the source of the problem. If the module still does not appear to be working properly after checking all possible causes, please contact your Ross Video products distributor, or the Ross Video Technical Support department at the numbers listed under the "Contact Us" section at the end of this manual.

1. **Visual Review –** Performing a quick visual check may reveal many problems, such as connectors not properly seated or loose cables. Check the module, the frame, and any associated peripheral equipment for signs of trouble.
2. **Power Check –** Check the power indicator LED on the distribution frame front panel for the presence of power. If the power LED is not illuminated, verify that the power cable is connected to a power source and that power is available at the power main. Confirm that the power supplies are fully seated in their slots. If the power LED is still not illuminated, replace the power supply with one that is verified to work.
3. **Input Signal Status –** Verify that source equipment is operating correctly and that a valid signal is being supplied.
4. **Output Signal Path –** Verify that destination equipment is operating correctly and receiving a valid signal.
5. **Unit Exchange** – Exchanging a suspect unit with a unit that is known to be working correctly is an efficient method for localizing problems to individual units.

Warranty and Repair Policy

The RossGear DFR-8110A is warranted to be free of any defect with respect to performance, quality, reliability, and workmanship for a period of FIVE (5) years from the date of shipment from our factory. In the event that your RossGear DFR-8110A proves to be defective in any way during this warranty period, Ross Video Limited reserves the right to repair or replace this piece of equipment with a unit of equal or superior performance characteristics.

Should you find that this RossGear DFR-8110A has failed after your warranty period has expired, we will repair your defective product should suitable replacement components be available. You, the owner, will bear any labor and/or part costs incurred in the repair or refurbishment of said equipment beyond the FIVE (5) year warranty period.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profits) incurred by the use of this product. Implied warranties are expressly limited to the duration of this warranty.

This RossGear DFR-8110A User Manual provides all pertinent information for the safe installation and operation of your RossGear Product. Ross Video policy dictates that all repairs to the RossGear DFR-8110A are to be conducted only by an authorized Ross Video Limited factory representative. Therefore, any unauthorized attempt to repair this product, by anyone other than an authorized Ross Video Limited factory representative, will automatically void the warranty. Please contact Ross Video Technical Support for more information.

In Case of Problems

Should any problem arise with your RossGear DFR-8110A, please contact the Ross Video Technical Support Department. (Contact information is supplied at the end of this publication.)

A Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions, should you wish our factory to repair your RossGear DFR-8110A. If required, a temporary replacement module will be made available at a nominal charge. Any shipping costs incurred will be the responsibility of you, the customer. All products shipped to you from Ross Video Limited will be shipped collect.

The Ross Video Technical Support Department will continue to provide advice on any product manufactured by Ross Video Limited, beyond the warranty period without charge, for the life of the equipment.

Ordering Information

In This Chapter

This chapter contains ordering information for the DFR-8110A and related products.

DFR-8110A and Related Products

Standard Equipment

- **DFR-8110A** Digital Products Frame and Power Supply (PS-8102)
  (2RU, holds 10 modules, includes 1 power supply)
- **8110ADR-004** Digital Products Frame & Power Supply (PS-8102) User Manual

Optional Equipment

- **8110ADR-004** Digital Products Frame & Power Supply (PS-8102) User Manual
  (additional User Manual)
- **DFR-8110A-C** Digital Products Frame with Cooling Fan Module
  and Power Supply (PS-8102)
  (2RU, holds 10 modules, includes 1 power supply)
- **CFM-8110A** Cooling Fan Module
  (upgrade cooling kit for standard DFR-8104A(-C))
- **PS-8102** Power Supply (85-264 Volts)
  (redundancy option power supply for Ross 8000 series 2RU digital product frames)
- **FSB-7110** Rear Support Bars and Brackets
  (additional support for rear frame-to-rack mounting)
- **EXT-8100** Extender Board
  (module servicing extension)
- **CRB-8110A** Card Retaining Bracket
  (module retainer used in field installations such as mobile trucks etc.)
- **CSB-8100** Cable Support Bracket
  (cable support bar for rear of digital frames)

Your **DFR-8110A Digital Products Frame & Power Supply (PS-8102)** is a part of the RossGear family of products. Ross Video offers a full line of RossGear terminal equipment including distribution, conversion, monitoring, synchronizers, encoders, decoders, keyers, switches, as well as analog audio and video products**.**

Contact Us

Contact our friendly and professional support representatives for the following:

- Name and address of your local dealer
- Product information and pricing
- Technical support
- Upcoming trade show information

PHONE	**General Business Office and Technical Support**	613 • 652 • 4886
	After-hours Emergency	613 • 652 • 4886 ext. 333
	Fax	613 • 652 • 4425
E-MAIL	**General Information**	solutions@rossvideo.com
	Technical Support	techsupport@rossvideo.com
POSTAL SERVICE	**Ross Video Limited**	8 John Street, Iroquois, Ontario, Canada K0E 1K0
	Ross Video Incorporated	P.O. Box 880, Ogdensburg, New York, USA 13669-0880

Visit Us

Please visit us at our website for:

- Company information
- Related products and full product lines
- On-line catalog
- Trade show information
- News
- Testimonials

www.rossvideo.com